


TOGLIERE LA PEDANA POGGIPIEDE, LA FIANCATA SOTTOPIEDANA SINISTRA E ALLENTARE LEGGERMENTE LE VITI DELLA PROTEZIONE SERBATOIO. APPLICARE IL CAVALLETTO COME DA SCHEMA. (RICORDARSI DI SERRARE LE VITI DELLA PROTEZIONE SERBATOIO).  
RACCOMANDIAMO DI LUBRIFICARE LO SNODO.

ENLEVER LE TABLIER REPOSE-PIED ET LE COTE SOUSTABLIER GAUCHE. DESERRER LEGEREMENT LES VIS DE LA PROTECTION DU RESERVOIR. APPLIQUER LA BEQUILLE SUIVANT LE DESSIN. (SE RAPPELER DE SERRER LES VIS DE LA PROTECTION DU RESERVOIR).  
NOUS RECOMMANDONS DE LUBRIFIER L'ARTICULATION

REMOVE THE FOOTBOARD AND THE UNDER LEFT SIDE. LIGHTLY UNLOOSE THE SCREWS OF THE TANK PROTECTION. PLACE THE STAND FOLLOWING THE DRAWING. (REMEMBER TO TIGHTEN THE TANK PROTECTION SCREWS).  
WE RECOMMEND TO LUBRICATE THE JOINT

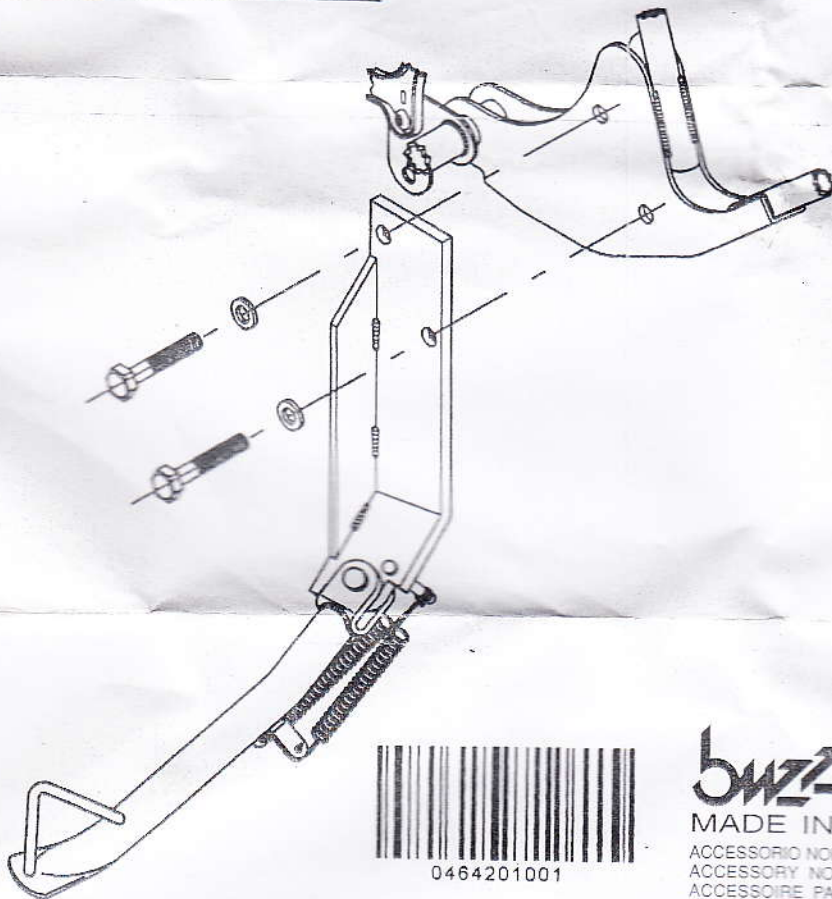

VIETATA LA RIPRODUZIONE ANCHE PARZIALE  
FULL OR PARTIAL REPRODUCTION IS FORBIDDEN



0464201001

**buzzetti®**

MADE IN ITALY

ACCESSORIO NON ORIGINALE  
ACCESSORY NOT ORIGINAL  
ACCESSOIRE PAS ORIGINAL  
ZUBEHÖR NICHT ORIGINAL

**Art. 4642**

CAVALLETTO LATERALE  
SIDE STAND  
BEQUILLE LATERALE  
SEITENSTAEND

per / for / pour

**PEUGEOT  
JET FORCE 50**